

FIRE – FIGHTING HELMET **PAB FIRE**

(EN 443)

The fire-fighting helmet is created for the most demanding range of fire-fighting profession. It fulfills all the conditions of an amateur as well as the conditions of a highest professional fire department.

The exterior shell protects; head, ears and the neck area. The incorporated retractable visor enables a complete face-protection, even in situations when a gas mask (EN 136) has to be used.

The visor is made of high-quality self-extinguishing polycarbonate. It is provided by upper and lower security holders.

Between the visor and the shell, there is the central carrier which connects and carries the elastic basket fixed in six points. The basket is adaptable to the head volume, from 54 to 62 cm.

The entire interior basket is covered with fine ecologic-antiallergic folie.

Two straps along head, a connecting strap and a chin-strap are used to fasten the helmet to the head. The longitudinal straps are provided by mobile triangles, which make possible setting of the chin-strap position.

On the tail-part of the interior carrier, there are seven holders (buttons) of the neck-protecting leather.

To obtain a safe wearing, the helmet should be strongly settled (by height and by volume of head), so that even in case of an excessive slope it keeps the firstly arranged position. That is to be realized by an arrangement of the interior basket. The step that follows is the fastening of the helmet with the chin-strap. The position of chin-strap on the longitudinal straps will be obtained with a help of the mobile triangles which will be moved to the position in which the chin-strap comfortably and safety embraces the wearer's chin. At the end, we arrange the length of the chin-strap and incorporated clip; we turn over the chin-strap and press it up to the hedgehog. To unfasten the chin-strap we simply press the PRESS plate.

If, by the circumstances, wearing of a gas mask is demanded; the helmet has to be taken off. We first put on the mask and attach the air filter or an air supply. After that we first set the front side of the helmet upon the front part of the mask and then pull the helmet down to the head. We consequently pull the chin-strap between neck and the mask, and fix the clip (that will demand a small increasing of the chin-strap length). The helmet has to be taken off from the front side first.

To obtain a long life of the retractable visor, we pull it out only when an eye or face protection (in front of a direct flame, water spurt or falling objects) is necessary.

The helmet is to be cleaned with a mild solution of detergents. Special attention has to be paid to the visor, because of his sensitivity to the scratches. Therefore, after washing it, we always wipe it with a soft cloth.

In case of any damages, even if those are not obvious, the helmet has to be changed in complete.

Only original spare parts, marked by the producer, can be used.

No changements, on the helmet, are allowed.

Use of colours or stickers only in accordance with the producer.

For the helmet PAB FIRE, the following spare parts are available:

- The interior basket;
- Chin-strap;
- The neck-protecting leather
- The visor.

For any further information, please contact:

P A B – Plastika AKRAPOVIĆ Buzet, 52420 Buzet, Most 26

C R O A T I A

Tel. : ++ 385 52 66 26 62, 66 23 00

Fax : ++ 385 52 66 22 54



CERTIFIKATE No 90381

3021